



BRIGHT IS ONLY THE BEGINNING

INSTALL GUIDE

XB EVO SUPERCHARGED DRIVER (ROUND)

WHAT'S INCLUDED



**2X SUPERCHARGED LED
DRIVERS**



**1X PACKET DIELECTRIC
GREASE**



WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.




INSTALLATION

1. LOCATE THE LED DRIVER ON YOUR HEADLIGHT ASSEMBLY. REMOVE THE STANDARD DRIVER BY TURNING IT COUNTERCLOCKWISE AND PULLING IT OUT OF THE HOUSING



11. DEPRESS THE CLIP ON EACH OF THE DRIVER CONNECTORS AND PULL TO DISCONNECT THE DRIVER FROM THE INTERNAL HEADLIGHT WIRING

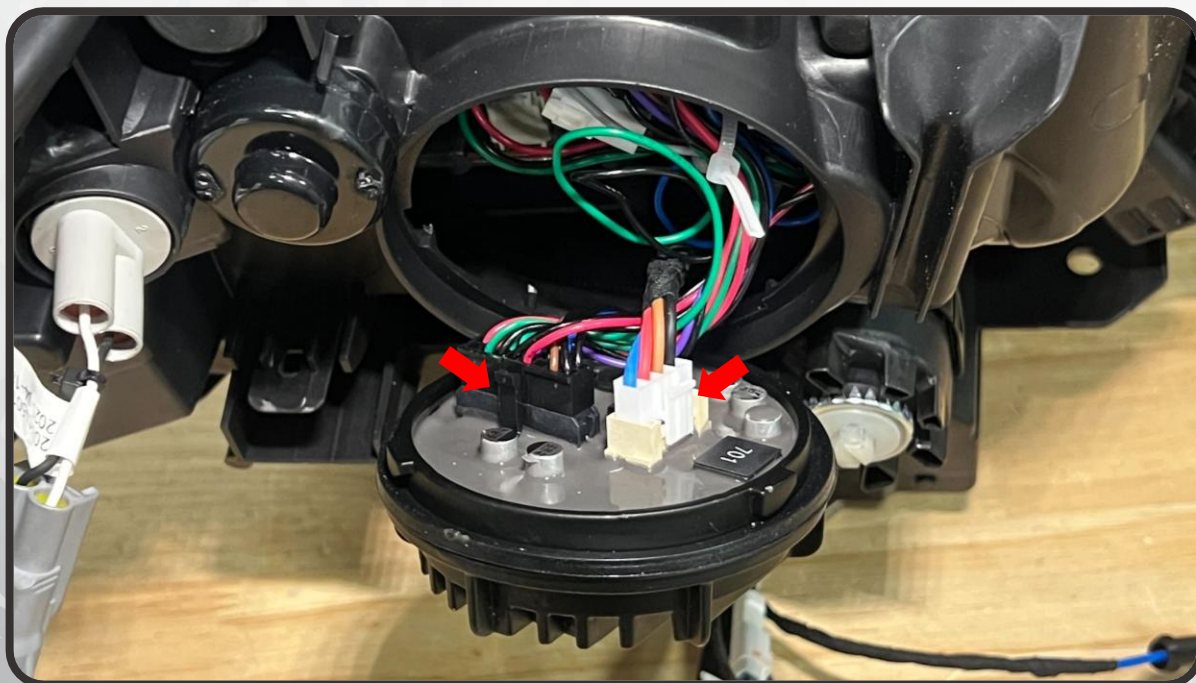


INSTALLATION

3. APPLY A THIN LAYER OF THE INCLUDED GREASE TO THE SEAL ON THE NEW DRIVER WHERE IT SEALS AGAINST THE HOUSING



4. CONNECT THE NEW SUPERCHARGED DRIVER TO THE INTERNAL HEADLIGHT WIRING, MAKING SURE THE TAB ON EACH OF THE CONNECTOR'S CLIPS SECURELY INTO PLACE

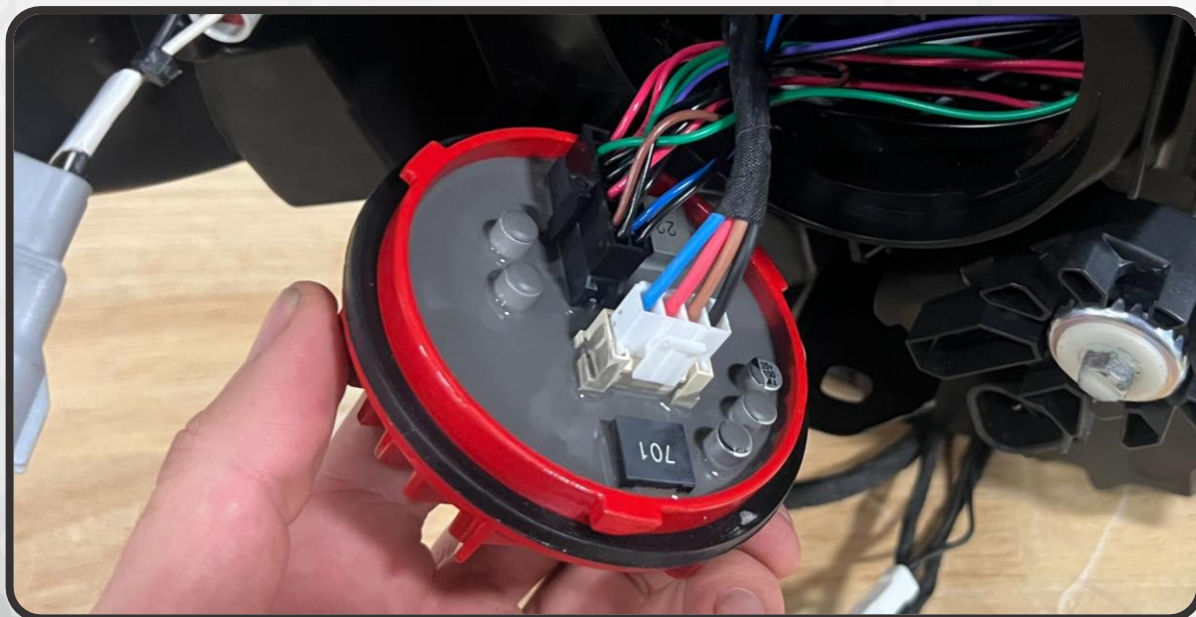

INSTALLATION

13. ALIGN THE TABS ON THE SUPERCHARGED DRIVER WITH THE NOTCHES IN THE HOLE ON THE HOUSING AND PRESS THE DRIVER STRAIGHT INTO THE MOUNTING LOCATION. MAKE SURE THE RUBBER SEAL IS SEATED PROPERLY AND DOES NOT GET PINCHED OR BUNCHED UP. SECURE THE DRIVER TO THE HOUSING BY ROTATING IT CLOCKWISE UNTIL IT STOPS TURNING



6. REPEAT THESE STEPS ON THE OTHER HEADLIGHT ASSEMBLY

YOU WILL NOTICE THERE ARE THREE LEDS ON THE BACK OF THE LED DRIVER. THESE LEDS INDICATE WHEN POWER IS BEING RECEIVED BY THE HEADLIGHT. IF ANY OF THESE INDICATOR LIGHTS ARE NOT ILLUMINATED WHEN THE CORRESPONDING FUNCTION SHOULD BE POWERED, RECHECK YOUR CONNECTIONS AND RELEVANT FUSES

- RED – FUSE TAP
- BLUE – HIGH BEAM
- GREEN – LOW BEAM

